

## 1.0 IR/UHF GRAY BUTTON REMOTE

### Mode Button

Press to change the operational mode of the Remote (mode)

### TV/Video Button

Press to switch through TV Inputs

### Mute Button

Turns TV sound On/Off

### Volume Button

Press to lower or raise the TV sound

### Left/Theme Button

Moves cursor to the Left and views the Themes Menu when in Satellite Mode

### Select Button

Selects highlighted item on the TV Screen

### Info Button

Displays program information

### Address Button

Change remote address

### Record Button

Press to record program onto tape in VCR mode

### Stop Button

Press to stop play back in VCR mode

### Rewind Button

Press to rewind in VCR mode

### Play Button

Press play to watch VCR tape

### Power Button

Turn On/Off the satellite receiver

### Menu Button

Press to view the Main Menu

### Guide Button

Displays the Program Guide and cycles through the Favorite Lists

### Up Button

Channels up or Moves the cursor up

### Right/Browse Button

Moves cursor to the Right and opens the Browse Banner when in Satellite mode

### Down Button

Channels down or Moves the cursor down

### Cancel Button

Cancels the screen currently displayed

### View Button

View the Program Banner while watching programming

### Number Buttons

Used to enter channel numbers, navigating the Interactive Menus

### Recall Button

Returns to previous channel

### Pause Button

Press to pause VCR tape

### Fast Forward Button

Press to forward the VCR tape

