

3.0 IR REMOTE

TV Mode Button
Press to control TV functions

SAT Mode Button
Press to control satellite receiver

TV/Video Button
Press to switch through TV Inputs

Menu Button
Press to view the Main Menu

Volume Button
Press to lower or raise the TV sound

Mute Button
Turns TV sound On/Off

Select/Play Button
Selects highlighted item on the TV Screen or Play in VCR mode

Left/Themes/Rewind Button
Moves cursor to the Left, views the Themes Menu when in Satellite Mode, and Rewind in VCR mode

Recall Button
Returns to previous channel

Info Button
Displays program information

Sys Info Button
Displays the satellite receiver System Information Screen

DISH Button
Will access the dish home Interactive TV menu

Star Button
Press to backspace without deleting while using the Search feature

Identifier Tab
Identifies the remote from TV1, TV2, IR, or UHF

Recover Button
Allows easy recovery back to DISH Network programming and toggles through TV inputs

VCR Mode Button
Press to control VCR functions

Aux Mode Button
Press to control Stereo, DVD etc.

Power Button
Turn On/Off the selected mode

Page Up/Down Button
Use to Page Up or Down in the Program Guide or in the Themes List

Guide Button
Displays the Program Guide and cycles through the Favorite Lists

Up Button
Channels up, Moves the cursor up, and Stops in VCR mode

Right/Browse/Fast Forward Button
Move cursor to the Right, opens the Browse Banner when in Satellite Mode, and Fast Forward in VCR mode

Cancel Button
Cancels the screen currently displayed

Down Button
Channels down, Moves the cursor down, and Pause in VCR mode

View Button
View the Program Banner while watching programming

Record Button
Press to Record in VCR mode

Number Buttons
Used to enter channel numbers, navigating the Interactive Menus, and the letters in Search Menu

Pound Button
Used in SAT Mode to display the Search screen